


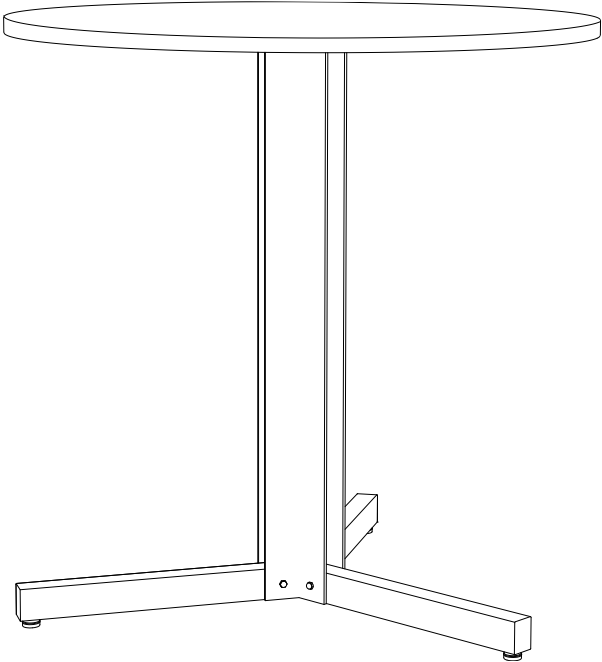

SPLIT CAFE TABLE

Brushed Stainless Steel & Warm Oiled Oak
Ø74 x H74 cm

3 x Adjustable screw feet

3 x Felt pads


6 x Threaded poles

12 x Cap nuts




Tool: Socket wrench/ Bolt nut wrench is not included!

1.

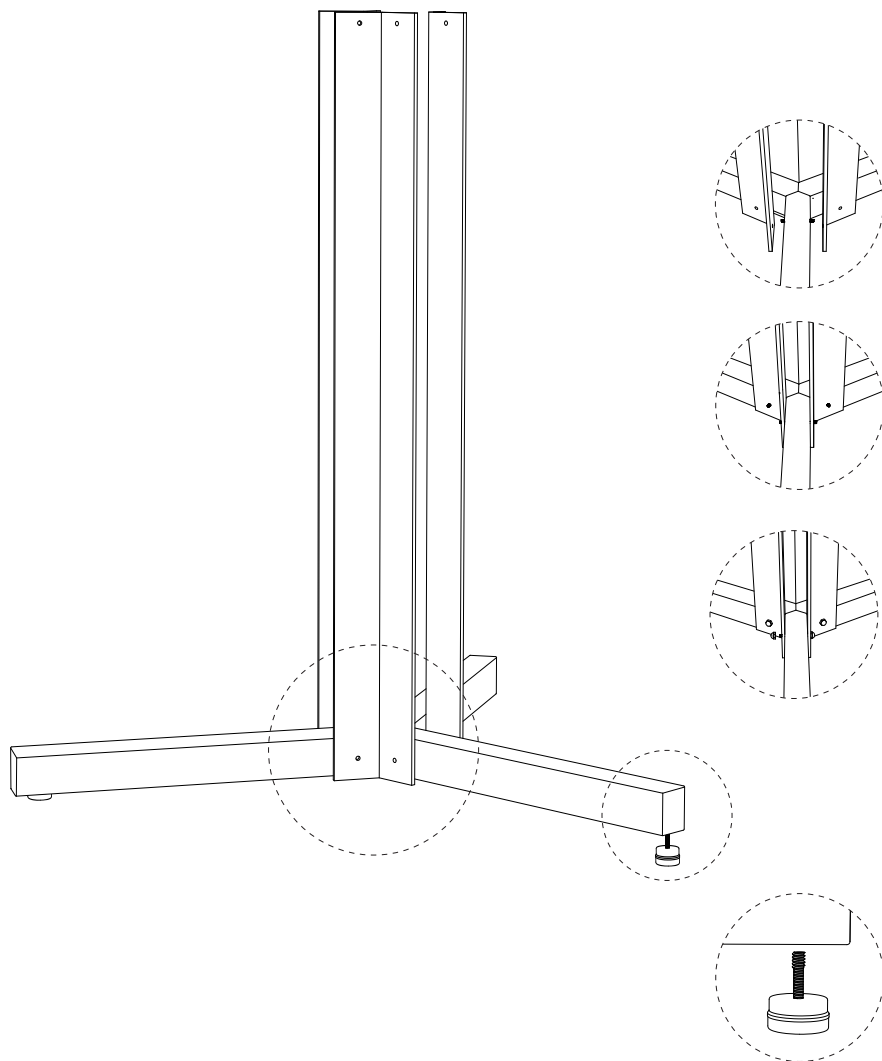

1. Attach the adjustable screw feet or felt pads underneath the table foot.
2. Insert the threaded rod into the hole in the table foot. Position the table leg so the threaded rod passes through the hole in the leg.
3. Fasten the table leg to the table foot by screwing the cap nuts onto both ends of the threaded rod.
4. Repeat steps 2–3 for each remaining table leg.

2.

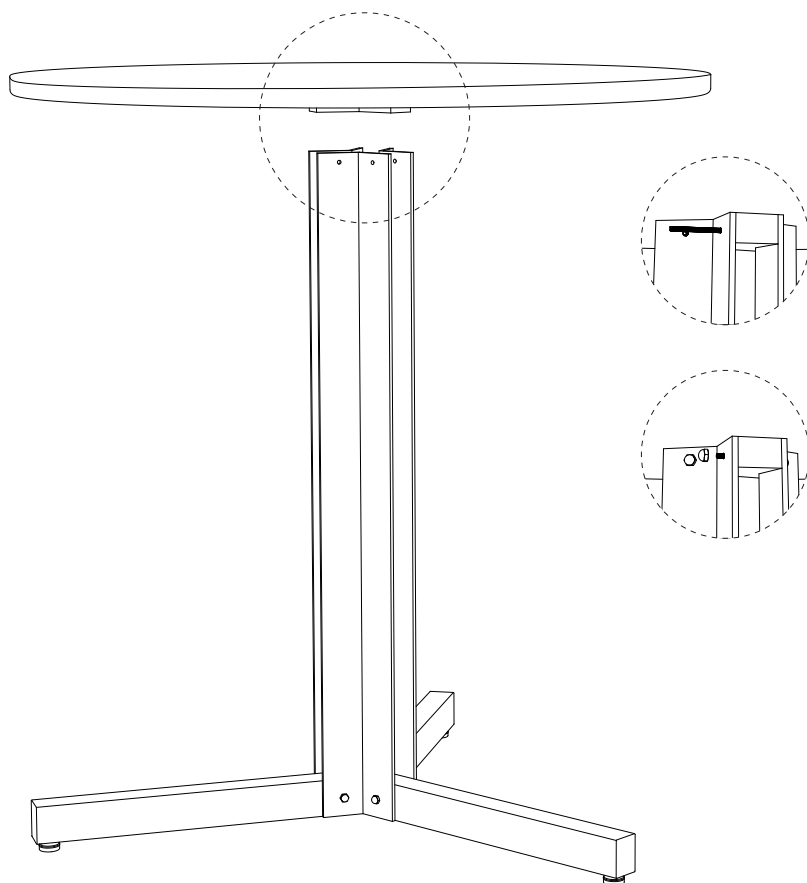

1. Place the tabletop on top of the legs. Ensure that the triangle on the tabletop is positioned inside the table legs.
2. Insert the threaded rod into the hole in the table legs so it passes through both the leg and the triangle.
3. Attach the cap nuts to both ends of the threaded rod and tighten securely.
4. Repeat steps 2-3 for each remaining table leg.